



# Installation Instructions for Software

**Camera System:** 120es

**Software Application:** 120es Photoshop Plug-in

**Operating Systems:** MacOS 8.5–9.2.x

Date: Aug 5 2002

Revision: 1.0

## Before you begin!

---

If you are only installing a driver, you can proceed to [1.1 Driver Installation](#) below. Drivers are available free of charge from the Pixera web site's [Driver Download](#) section.

---

## Content:

1.0 Software Installation

    1.1 Driver Installation

    1.2 120es Photoshop Plug-in and Driver Installation (Integrated installation)

## **1.1 Driver Installation Only**

You must first download the driver from the Pixera web site's, **Driver Download** section. Save the file on your desktop, so it's easy to find later.

### **Step 1.**

Uncompress the driver files, with **Stuffit Expander**, which should be pre-installed on your computer.

### **Step 2.**

**Desktop Users** (PCI card):

Drag & drop the Pixchip PCI driver file into the Extensions folder inside the System Folder on your hard drive. If prompted to replace the current driver, click OK.

**Notebook Users** (PCMCIA card):

Drag & drop the PixeraPCCardEnabler file into the Extensions folder inside the System Folder on your hard drive. If prompted to replace the current driver, click OK.

### **Step 3.**

The second file is Pixera VDIG. It creates video communication between the Pixera camera and third party video conferencing software, i.e. Net meeting, etc. If you don't have this capability installed and need it, drag & drop this file into the Extensions folder inside the System Folder on your hard drive.

## **1.2 120es Photoshop Plug-in and Driver Installation (Integrated Installation)**

The MacOS driver installation is incorporated in the installation of software application. The software package is available in two types of media, CD-ROM and floppy disk. While the installation procedure for both types of media are similar, only the CD-ROM version includes the demo album with images.

### **Step 1.**

If you are installing from floppy diskettes, insert Disk 1 of the Software into your floppy disk drive. If you are installing from CD-ROM, insert the disc into your CD-ROM drive.

### **Step 2.**

Double click the floppy disk or CD-ROM icon that appears on your desktop to view it's contents.

### **Step 3.**

Double click the installer icon and begin the installation program.

### **Step 4.**

An informational screen will be displayed, along with version and copyright details. Click Continue to proceed with the installation process.

### **Step 5.**

You will be presented with the Software Licensee Agreement. Click Agree to proceed with the installation process if you agree with its terms.

### **Step 6.**

The Install Options dialog box appears. Select from one or more of the four installation options and click Install. After you have selected from the installation options, click Install to proceed with the installation process.

### **Step 7.**

Select the folder into which you would like to install the application. You may choose to accept the default destination folder or specify a custom path. When you are finished, click Install.

### **Step 8.**

An install window will be shown to ask if you want to install the "Pixera Plug-in". Click on the Install button if you have Photoshop installed on your computer, else click on the "Quit" button and proceed to step 10.

### **Step 9.**

A dialog box will be shown with a list of folders inside the Photoshop folder. Select the "Plug-ins" folder and click on the "Install into Plug-ins" button.

### **Step 10.**

A dialog box will be shown to tell you that your Macintosh may need to be restarted. Click on the "Yes" button.

### **Step 11.**

Now Restart the computer and your software will be ready to be used.

Pixera doesn't guarantee compatibility with all vendors but make great effort in providing compatible solutions for a large number of computers, operating systems and other products. In no event will Pixera be Liable for direct, indirect, special, incidental or consequential damages arising out of the use or inability to use the software or documentation, even if advised of the possibility of such damages.

If a recommended solution doesn't work or your system do not comply, please contact our Technical Support at (408) 341 1800 Ext. 3 or via email at [techsupport@pixera.com](mailto:techsupport@pixera.com)