



Installation Instructions for Software

Camera Systems: Professional, Personal, PVC-100, PVC-100C

Software Applications: VCS (Visual Communication Suite)

Operating Systems: MacOS 8.5–9.2.x

Date: Aug 5 2002

Revision: 1.0

Before you begin!

If you are only upgrading your driver, you can proceed to [1.1 Driver Installation](#) below. Drivers are available free of charge from the Pixera web site's [Driver Download](#) section.

Content:

1.0 Driver Installation

2.0 Application and Driver Installation (Integrated installation)

1.0 Driver Installation Only

You must first download the driver from the Pixera web site's, **Driver Download** section. Save the file on your desktop, so it's easy to find later.

Step 1.

Uncompress the driver files, with **Stuffit Expander**, which should be pre-installed on your computer.

Step 2.

Desktop Users (PCI card):

Drag & drop the Pixchip PCI driver file into the Extensions folder inside the System Folder on your hard drive. If prompted to replace the current driver, click OK.

Notebook Users (PCMCIA card):

Drag & drop the PixeraPCCardEnabler file into the Extensions folder inside the System Folder on your hard drive. If prompted to replace the current driver, click OK.

Step 3.

The second file is Pixera VDIG. It creates video communication between the Pixera camera and third party video conferencing software, i.e. Net meeting, etc. If you don't have this capability installed and need it, drag & drop this file into the Extensions folder inside the System Folder on your hard drive.

2.0 Application and Driver Installation (Integrated Installation)

The MacOS driver installation is incorporated in the installation of software application. The software package is available in two types of media, CD-ROM and floppy disk. While the installation procedure for both types of media are similar, only the CD-ROM version includes the demo album with images.

Step 1.

If you are installing from floppy diskettes, insert Disk 1 of the Software into your floppy disk drive. If you are installing from CD-ROM, insert the disc into your CD-ROM drive.

Step 2.

Double click the floppy disk or CD-ROM icon that appears on your desktop to view it's contents.

Step 3.

Double click the installer icon and begin the installation program.

Step 4.

An informational screen will be displayed, along with version and copyright details. Click continue to proceed with the installation process.

Step 5.

You will be presented with the Software Licensee Agreement. Click continue to proceed with the installation process if you agree with its terms.

Step 6.

The Install Options dialog box appears. Select from one or more of the four installation options and click Install. The "Demo Album" option only applies to VCS (Visual Communications Suite), CD-ROM version.

After you have selected from the installation options, click Install to proceed with the installation process.

Step 7.

Select the folder into which you would like to install the application. You may choose to accept the default destination folder or specify a custom path. When you are finished, click Install.

Step 8.

A dialog box will appear notifying that "Your Macintosh needs to be restarted after the installation is complete". Click Yes to begin the installation.

Step 9.

After the installation of the software is completed, you will be prompted to restart your computer. Make sure that all disks have been removed from their drives and click Restart to apply all changes to your system.

Step 10.

When you have restarted your computer system, the software will be located in the Pixera folder on your desktop (default installation)

Step 11.

In order to use the Pixera camera from within Adobe Photoshop (or compatible application), you must first copy the plug-in file (Pixera Import) into the Photoshop Plug-in folder.

Pixera doesn't guarantee compatibility with all vendors but make great effort in providing compatible solutions for a large number of computers, operating systems and other products. In no event will Pixera be Liable for direct, indirect, special, incidental or consequential damages arising out of the use or inability to use the software or documentation, even if advised of the possibility of such damages. If a recommended solution doesn't work or your system do not comply, please contact our Technical Support at (408) 341 1800 Ext. 3 or via email at techsupport@pixera.com